



# WarmMark®

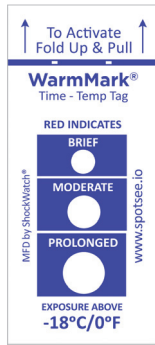

**Unactivated**

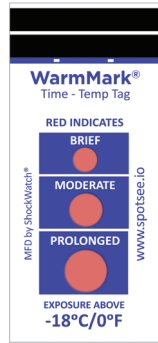

**Activated**

## Reduce Costly Returns

Single-Use,  
Ascending Time  
Temperature  
Indicator

1

Evidence  
of exposure  
to above  
temperature  
excursions

2

Reduce costly  
medication  
returns

3

WarmMark  
indicators are  
accurate and  
cost-effective

# WarmMark®

## Single-Use, Ascending Time-Temperature Indicator

Available Temperatures			
3 Window Indicator	Brief	Moderate	Prolonged
8°C/46°F	2 hours	12 hours	48 hours
10°C/50°F			
20°C/68°F			
5°C/41°F	30 minutes	2 hours	8 hours
25°C/77°F			
30°C/86°F			
37°C/99°F			

### How to Use WarmMark:

1. Before arming, the WarmMark indicator should be placed in an environment at least 5°C (9°F) below the WarmMark's activation threshold temperature for a minimum of 30 minutes.
2. To arm the WarmMark indicator, fold up and pull out the indicator's activation tab until the tab and barrier film have been completely removed.
3. The WarmMark should be placed as close to the medication as possible.

**SpotSee®**

**For more information,  
contact us today:  
[www.SpotSee.io/Contact](http://www.SpotSee.io/Contact)**

